
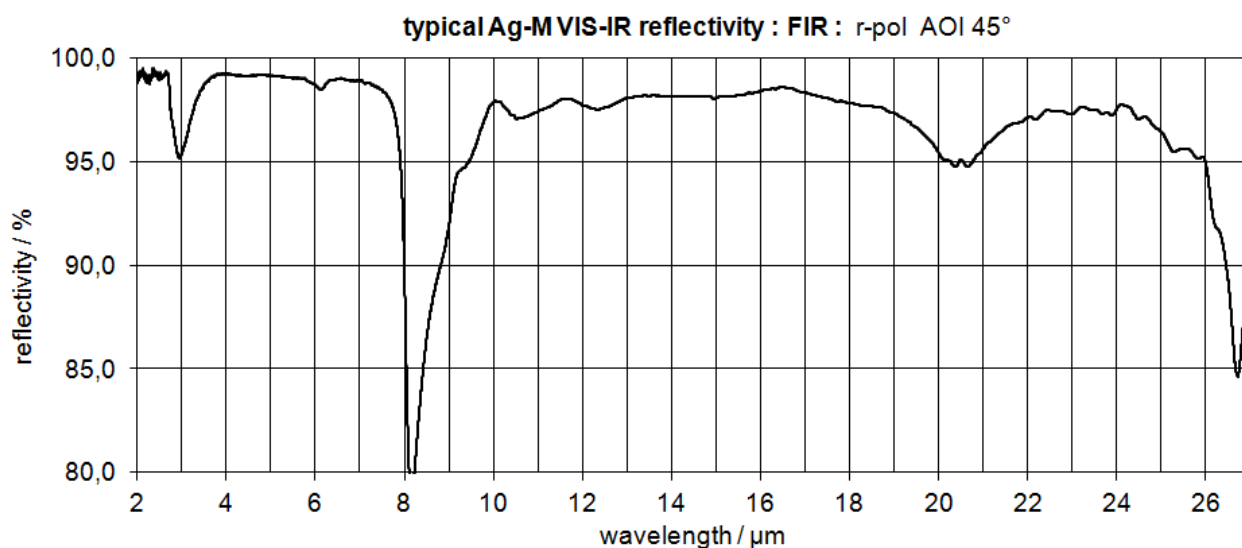


Coatings for ultra-high performance optoSiC-PLUS[®] mirrors **SCANcoat Ag-M VIS-IR used for large spectral range**

SCANcoat Ag-M VIS-IR is a protected metallic silver coating with high reflectivity for vision systems and spectral radiation uniform broad band requirements when used under large angles of incidence on common galvano-scanning systems.

SCANcoat Ag-M VIS-IR shows low phase shift to meet the toughest specifications required for laser applications with enhanced reflectivity performance .

Coated optoSiC-PLUS[®]-mirrors can withstand strong laser radiation at high power and high energy densities. For other wavelength are dedicated standard coatings available and many other coatings on request. Please refer to technical datasheets for SCANcoat coatings available on optoSiC-PLUS[®] or see download-links on homepage and ask our sales people for further choices on other specialized coatings.

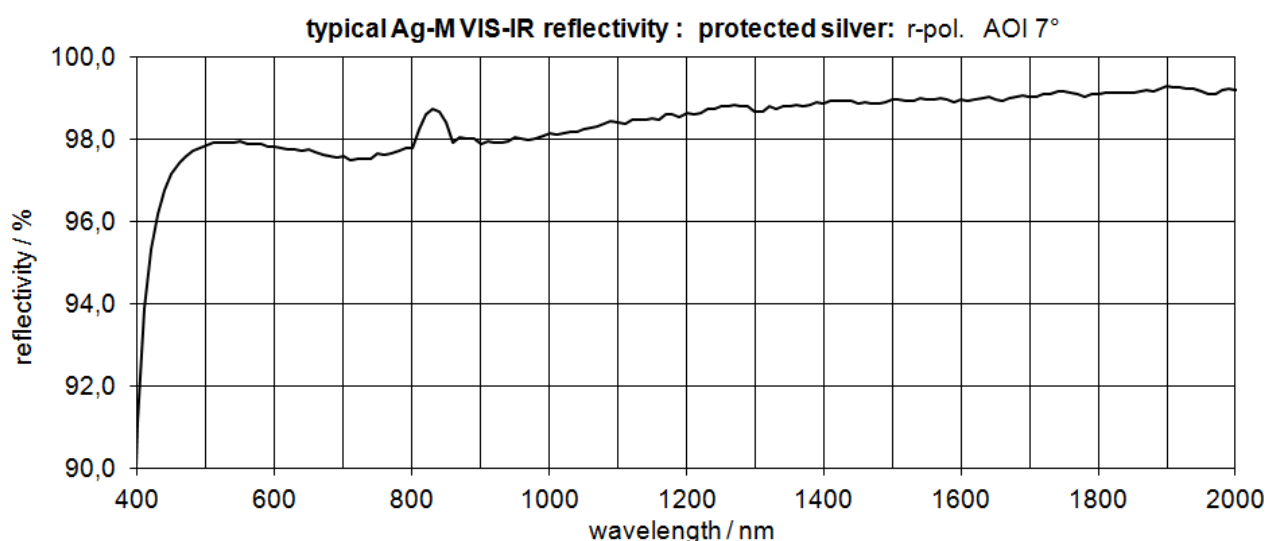

GENERAL	PROPERTIES	Typical values	
COATING	Wavelength [λ_1] (nm)	~ 450	s. spectrum
	Wavelength [λ_2] (nm)	> 7000	
	Scan Angle (°)	45 ±10	
	$R_{avg}(\lambda_1)$ @45° r-pol (%)	>98,0	+/- 0,5 % ; AOI 45°
	$R_{avg}(\lambda_2)$ @45° r-pol (%)	>98,0	+/- 0,5 % ; AOI 45°
	Phase Shift (°)	n.d.	
	Powerdensity (kW/cm ²)	n.d.	
	Damage Treshold Energiedensity (J/cm ²)	5,1	measured at 1064nm 10 ns, 1 Hz , 0°

LIDT = laser induced damage threshold typically given as x-Watts per linear millimeter of beam radius (br) ($1/e^2$ intensity points) ±10% at 45° Angle of Incidence.

Transmission edges can vary ~ 2% of the given wavelength.

All data given for lab.-conditions 20...25°C, at higher temperatures thermal shifts will occur.

n.d. = not defined

COATING characteristics	SCANcoat Ag-M VIS-IR "protected silver"		
Adhesion	MIL-C-48497	§ 4.5.3.1	Tape Test: peel off medium grade
Humidity	MIL-C-48497	§ 4.5.3.2	Storage 49°C : 100 % RH min. 24 h
Abrasion	MIL-C-48497	§ 4.5.3.3	"cheesecloth", 50 times pulles with force 450 g over the surface
Temperature	MIL-C-48497	§ 4.5.4.1	Typ ambient use: -20 ... 70 °C storage -61°C ... 72°C for min. 2 h
Cleaning:	carefully	With pure chemical analytical reagent grade di-Water, Alcohol iso-Propanol, Aceton	

Use an air bulb to blow off any loose contaminants from the surface before proceeding to the cleaning steps.

- I. Dampen an unused cotton swab or a cotton ball with acetone or iso-propanol (purity-grades 99.99).
- II. Gently wipe the surface with the damp cotton. Do not rub hard.
- III. Drag the cotton across the surface just fast enough so that the liquid evaporates right behind the cotton. This should leave no droplets or streaks.

Note: Use only paper-bodied cotton swabs and high-quality surgical cotton balls.

The specification or data herein contained are only given for indication, without any undertakings whatsoever. The content of this brochure is generally not binding and does not substantiate any claims for liability or other legal claims. All given information such as values or dimensions and specifications are approximate values only and without obligation. Their publication does not suggest the matter is free of any rights whatsoever. Furthermore, due to constant evolution of techniques and norms, we reserve the right to modify, at any time, the characteristics and specifications contained in this document. MERSEN refuses all and any responsibility concerning their use whatever the purpose or application. Any copy, reproduction or information herein contained, in whole or in part, made without MERSEN written consent, is forbidden according to the laws of France and particularly the law nr. 92-597 of July 1st 1992 relating to the copyright.

Please Contact:

MERSEN Deutschland Holding GmbH & Co. KG
 Branch: Baden-Baden
 Lange Straße 89a
 D-76530 Baden-Baden
 Germany

Phone: +49 (0) 7221 973974 0
 Fax: +49 (0) 7221 973974 211
 E-Mail: info@optoSiC.com
www.optosic.mersen.com